

**BC Link™ Radios EU:  
PMR446 Frequency Chart**

Channel	Frequency (MHz)	Power (W)
1	446.00625	0.5
2	446.01875	0.5
3	446.03125	0.5
4	446.04375	0.5
5	446.05625	0.5
6	446.06875	0.5
7	446.08125	0.5
8	446.09375	0.5

**BC Link™ Radios:  
FRS Frequency Chart**

Channel	Frequency (MHz)	Power (W)
1	462.5625	2.0
2	462.5875	2.0
3	462.6125	2.0
4	462.6375	2.0
5	462.6625	2.0
6	462.6875	2.0
7	462.7125	2.0
8	467.5625	0.5
9	467.5875	0.5
10	467.6125	0.5
11	467.6375	0.5
12	467.6625	0.5
13	467.6875	0.5
14	467.7125	0.5
15	462.5500	2.0
16	462.5750	2.0
17	462.6000	2.0
18	462.6250	2.0
19	462.6500	2.0
20	462.6750	2.0
21	462.7000	2.0
22	462.7250	2.0

**Privacy Codes [01-38]:  
CTCSS Frequency**

CTCSS (No.)	Frequency (MHz)
1	67.0
2	71.9
3	74.4
4	77.0
5	79.7
6	82.5
7	85.4
8	88.5
9	91.5
10	94.8
11	97.4
12	100.0
13	103.5
14	107.2
15	110.9
16	114.8
17	118.8
18	123.0
19	127.3
20	131.8
21	136.5
22	141.3
23	146.2
24	151.4
25	156.7
26	162.2
27	167.9
28	173.8
29	179.9
30	186.2
31	192.8
32	203.5
33	210.7
34	218.1
35	225.7
36	233.6
37	241.8
38	250.3

**Privacy Codes [39-80]:  
DCS Codes**

Tone (No.)	Octal Code
39	023
40	025
41	026
42	031
43	032
44	043
45	047
46	051
47	054
48	065
49	071
50	072
51	073
52	074
53	114
54	115
55	116
56	125
57	131
58	132
59	134
60	143
61	152
62	155
63	156
64	162
65	165
66	172
67	174
68	205
69	223
70	226
71	243
72	244
73	245
74	251
75	261
76	263
77	265
78	271
79	306
80	311

**Privacy Codes [81-121]:  
DCS Codes**

Tone (No.)	Octal Code
81	315
82	331
83	343
84	346
85	351
86	364
87	366
88	371
89	411
90	412
91	413
92	423
93	431
94	432
95	445
96	464
97	465
98	466
99	503
100	506
101	516
102	532
103	546
104	565
105	606
106	612
107	624
108	627
109	630
110	632
111	654
112	662
113	664
114	703
115	712
116	723
117	731
118	732
119	734
120	743
121	754