




# FLOAT

## Snowboard Carry Attachment Instructions

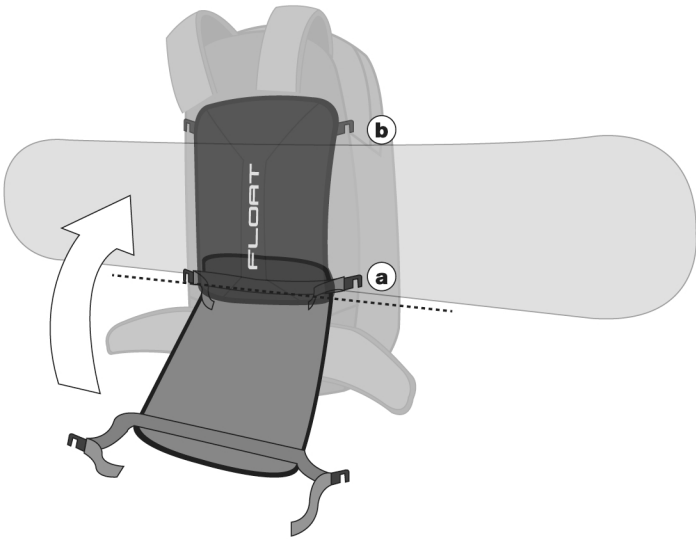

1. Start with the attachment upside down and connect the first set of hooks **a** (on the narrow edge of the attachment) to the loops on the edges of the pack. See illustration.
2. Lay your board centered on the pack, feeding it under the shoulder straps.
3. Flip the top of the attachment up over the board (cradling the snowboard in the fold). Connect the top hooks **b** and snug the straps.
4. The attachment can be left on the pack while riding.